


Service access panel:
450x450 mm or more

(Refer to note: 1)

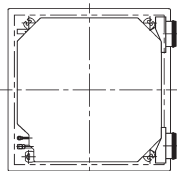


Service access panel:
450 x 450 mm or more

(Refer to note: 1)

Installation service access panel

725

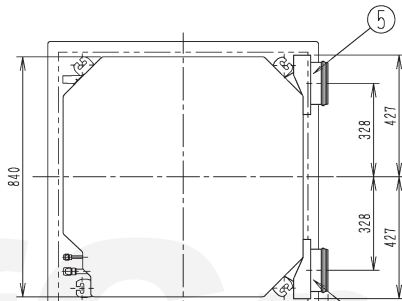

448

508

55

840

55

264

165

275

148

φ 148

155

275

155

155

155

155

155

155

155

155


155

155

155

455 (Ceiling opening space)



* Connecting chamber mounting space

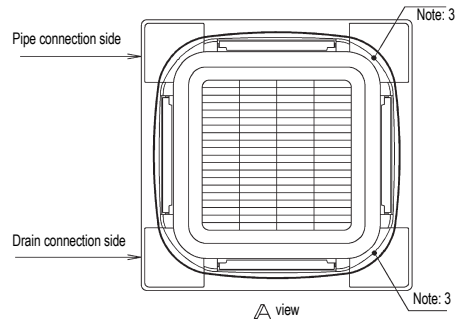

△ view

NOTES

- When installing this kit, inspection hatch is necessary. (It is necessary when servicing.) Either one of inspection hatches must be installed.
- Field construction.
- The corner air outlet of this part must be shut.
- In case of mounting a duct fan, make sure to use a wiring adapter for electrical appendices and link with the indoor unit fan.
- The intake air flow rate is recommended to be 20% or less of the H speed air flow rate. If the intake air flow rate is too large, the operating sound may rise or detection of the indoor unit suction temperature may be affected.
- It indicates the distance between the T-tube inlet and the indoor unit inlet when the T-tube is connected.

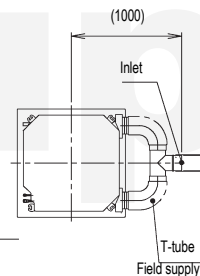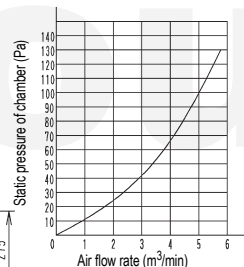

Ventilation resistance in chamber (Note: 6)

Nr	Name	Description
1	Indoor unit	
2	Decoration panel	
3	Suction chamber	
4	Connecting chamber (Right)	
5	Connecting chamber (Left)	